


## General information

### Unloading:

The panels can be unloaded from a lorry using a forklift truck or a crane. When lifting, special care must be taken to ensure that the panels cannot slip or fall off.


**Storage:** Never stack more than 30 panels on a pallet.

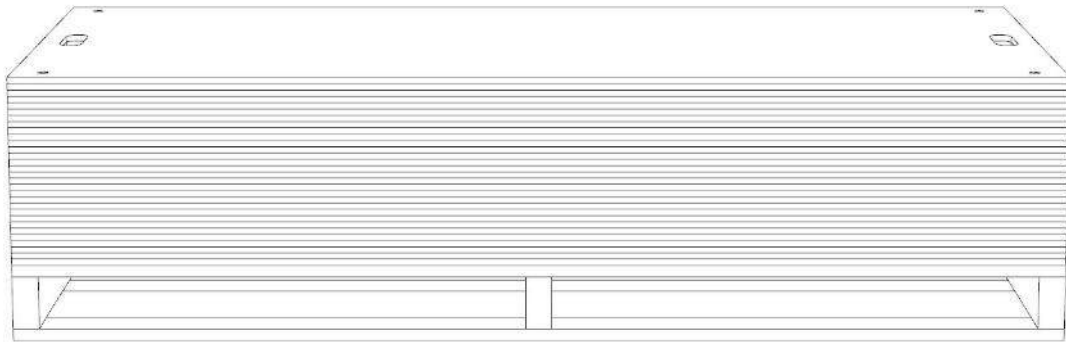

**Storage:** Never stack more than 45 panels on a stake rack.

Do not move more than 2 stake racks at a time using a forklift truck.

Move only one stake rack at a time using a chain sling.

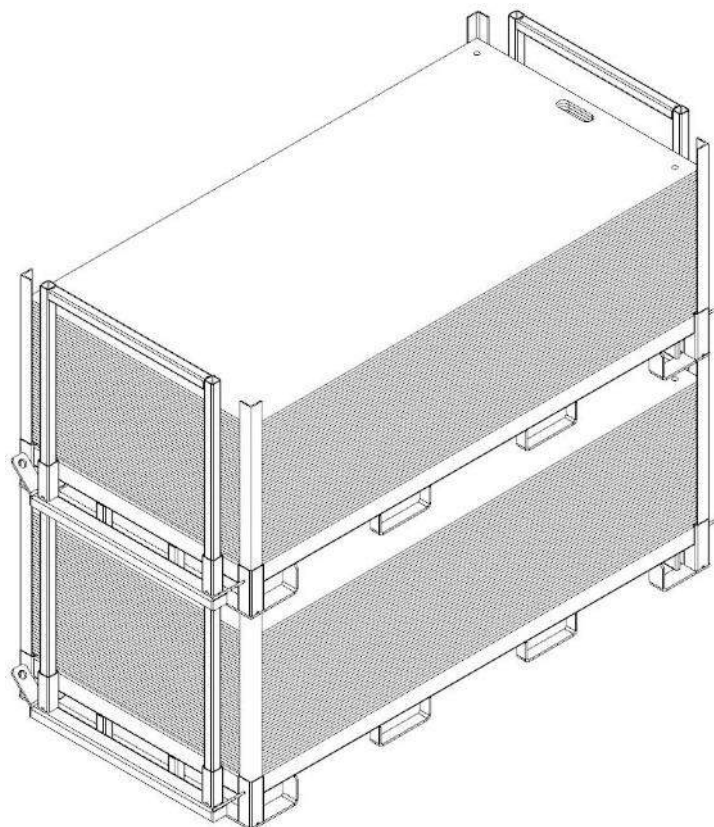


**Use of the panels:**

The upper side is smooth.




**Use of the panels:**

The underside is striated/roughened.

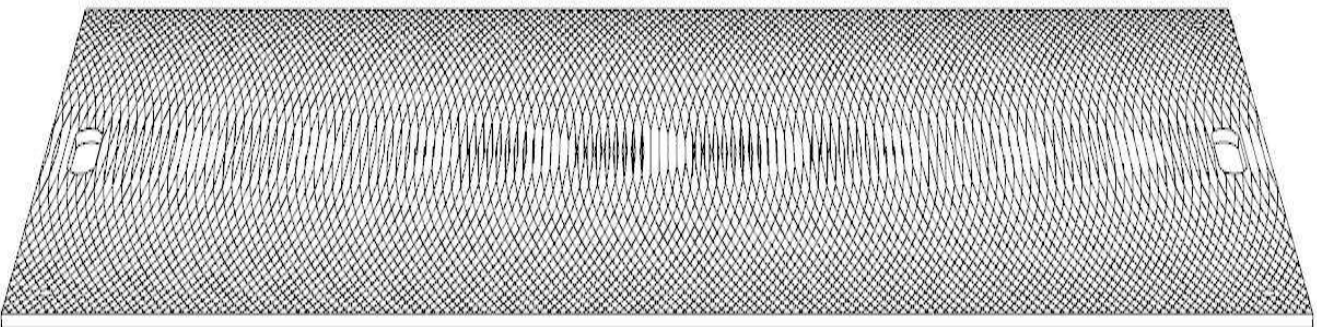

**Connecting 2 panels:**

Connect and screw the panels using the 2-way metal connector, 2 washers and 2 hexagonal screws (M10x16mm). All adjacent panels must be connected in this way.

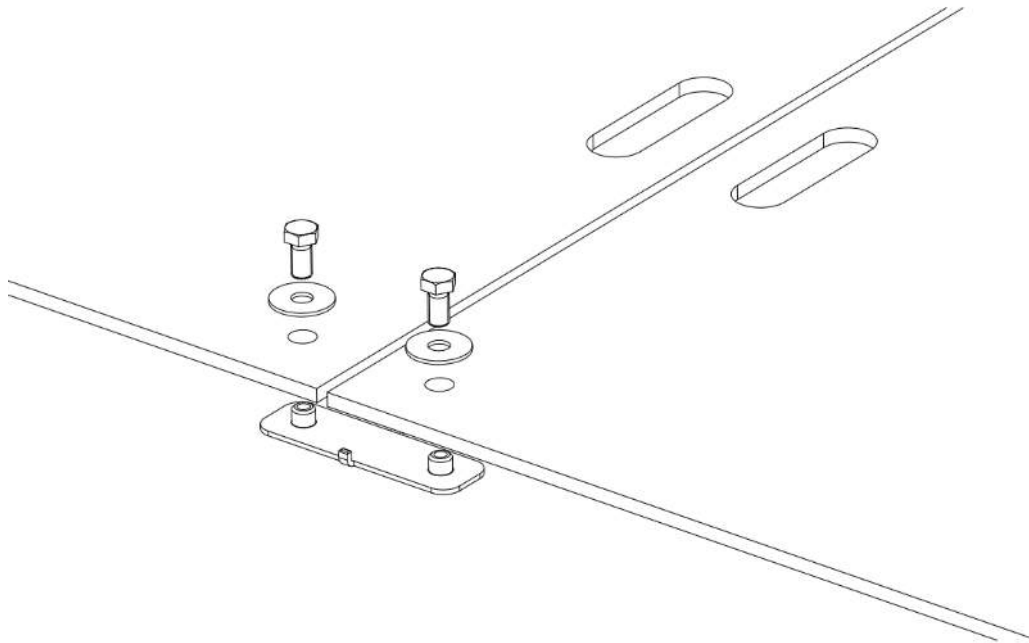

**Connecting 4 panels:**

Connect and screw the panels using the 4-way metal connector, 4 washers and 4 hexagonal screws (M10x16mm). All adjacent panels must be connected in this way.

