




General information

Unloading:


The panels can be unloaded from a lorry using a forklift truck. When lifting, special care must be taken to ensure that the panels cannot slip or fall off. The panels can also be unloaded and installed using a crane.

Storage: Never stack directly more than 3 panels at a time. It is recommended to stack a maximum of 4 packs of 3 panels on top of each other. Each package can be separated by 4 square timbers (100mmx100mm) to allow later lifting by forklift truck.

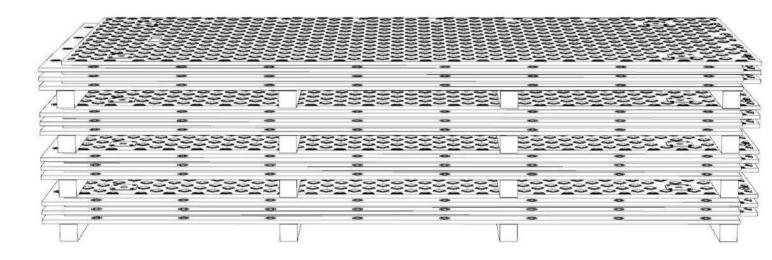

Use of the panels:

Single-sided use. The upper side has a high profile surface (suitable for the use of construction vehicles).

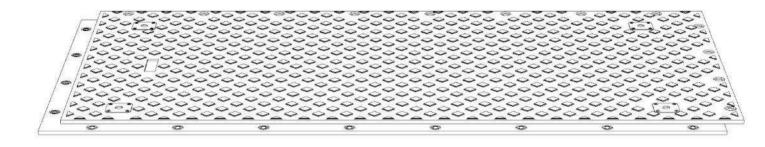


Distribution Partner: Fomacon Group Mörsenbroicher Weg 191 | D- 40470 Düsseldorf Tel.: +49 211 975 323 90 Free call: +49 800 11 00 77 5 www.vario-mat.com E-Mail: info@vario-mat.com



Lifting and laying:

Each panel has 4 lifting lugs. A lifting device must be inserted into each eyelet. These devices must in turn be connected to a lifting hook (on a chain sling).

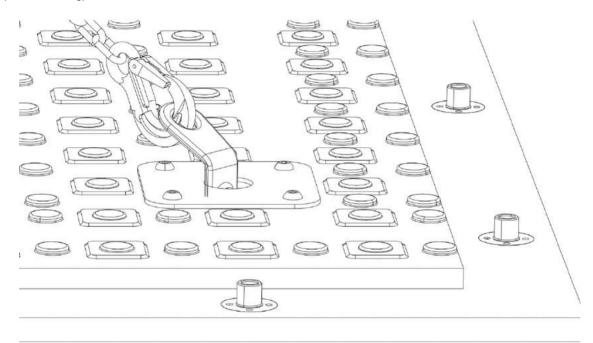

With the help of the chain sling, the panel can be moved to the desired position and installed.


CAR CAR CON 10 8 000 8 93 3 -00000 0000 8 8 9 8 (0) 8 (600) 8 8 0 9 100 (0) 9 0 -**FIGUN** (2) 8 3 (1000) (19) 1000 100 (0) (0) 0 (0) (00) (0) (5) 0 (52) 53 (0) (find -----1000 00 (9) 8 8 8 8 8 8 8 (0) (0) (2) 0 00 0 0 9 0 0 (0) (0) 1.00 (52) (9) (9) (3) 1.00 2 £ 13 0 0 0 0 0 00 9 200 (2) ((0) (0) D (0) 0 0 0 0 0 (S) (0) (9) (3) (2) 0 200 0 0 0 (0) (0) (0) (0) (2) (2) 1.52) 00 0 0 0 0 0 0 0 (0) 100 1921 1 s) 9 0 (0) 5 000 000 800 2 1000 (9) 1.00 000 1 (3) (0) 0 (03 (2) 6 J. 0 Ð, Ð,

Distribution Partner: Fomacon Group Mörsenbroicher Weg 191 | D- 40470 Düsseldorf Tel.: +49 211 975 323 90 Free call: +49 800 11 00 77 5 www.vario-mat.com E-Mail: info@vario-mat.com




Connecting the panels:

The panels are connected and screwed together using washers and screws (M16x40mm). All adjacent panels must be connected in this way. Always install the panels so that the surfaces of the same type face upwards.

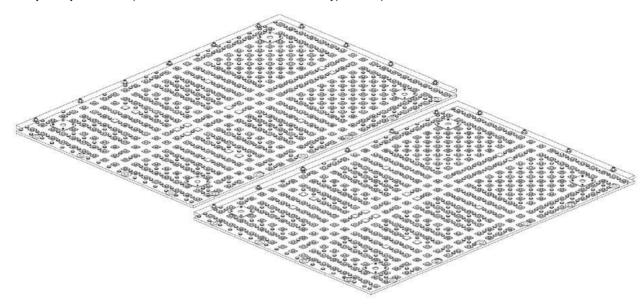

Connecting the panels together (vehicle side):

The panels are connected and screwed together using washers and screws (M16x40mm). All adjacent panels must be connected in this way. Always install the panels so that the surfaces of the same type face upwards.

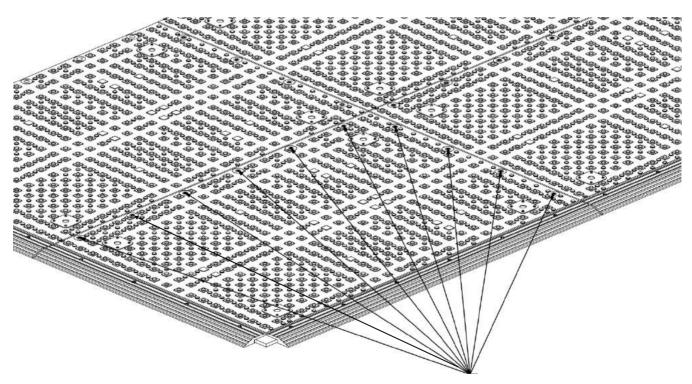

4m side: 8x screw M16x40, 8x washer 2m side: 4x screw M16x40, 4x washer


Tel.: +49 211 975 323 90 Free call: +49 800 11 00 77 5





Connecting the panels to the ramps (vehicle side):

The panels are connected and screwed together using washers and screws (M16x40mm). All adjacent panels must be connected in this way. Always install the panels so that the surfaces of the same type face upwards.

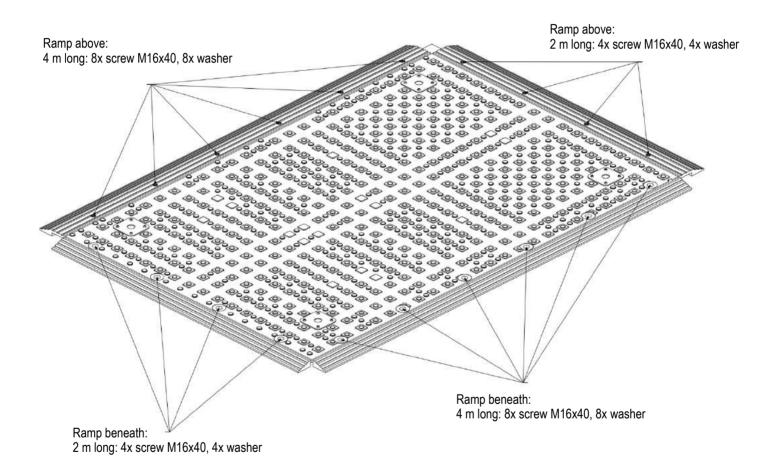

Distribution Partner: Fomacon Group Mörsenbroicher Weg 191 | D- 40470 Düsseldorf Tel.: +49 211 975 323 90 Free call: +49 800 11 00 77 5 www.vario-mat.com E-Mail: info@vario-mat.com